Process-Release Exhaust

- Only exists for fugitive sources. Fugitive sources are those vented directly to the atmosphere.
- Fugitive sources are also sources where some of the effluent leaks before the control system
- Generally the data is correct. If data is blank, use defaults of
 - Release Vol FlowRate = 1,000 ft3/min
 - Release Height = 0 feet
 - Release Temperature = 70 deg Fahrenheit

13


Disclaimer

Information shown on screens for this tutorial was taken from test data developed for the air emission reporting program. Device, process, and other information from existing facilities were used for illustrative purposes only. Existing facility data was used to show typical usage of screens in the program. None of the information presented in the following screens should be viewed as accurate information.

Process - Release Exhaust Screen

The program will only show this screen for a fugitive source. A fugitive emission is an emission that goes directly to the atmosphere rather than flowing through a control device or a smokestack. Generally the data you see in this window is correct. If you do not see information in these fields and you do not know what the numbers should be use the following defaults:

- ➤ Release Vol FlowRate = 1,000 ft3/min
- \triangleright Release Height = 0 feet
- ➤ Release Temperature = 70 deg Fahrenheit

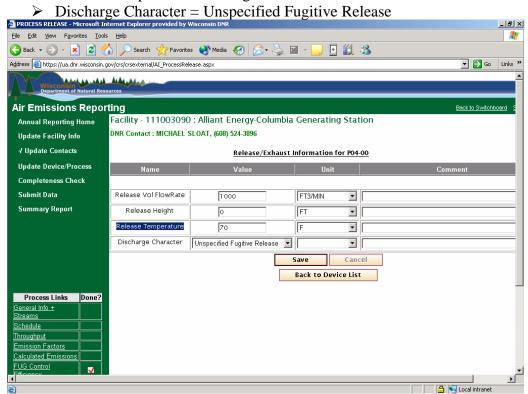

Clicking on the save button supplies the following successful pop up window.



Note that a red check mark appears in the process links box on the right of 'Release/Exhaust' located in the left side navigation area when the information is saved successfully.